


Dropper Post Assembly Guideline

1. Pull the dropper post cable from the seat tube



2. Insert the cable end with the clamp into the actuator, making sure the cable end sits nicely in the slot.

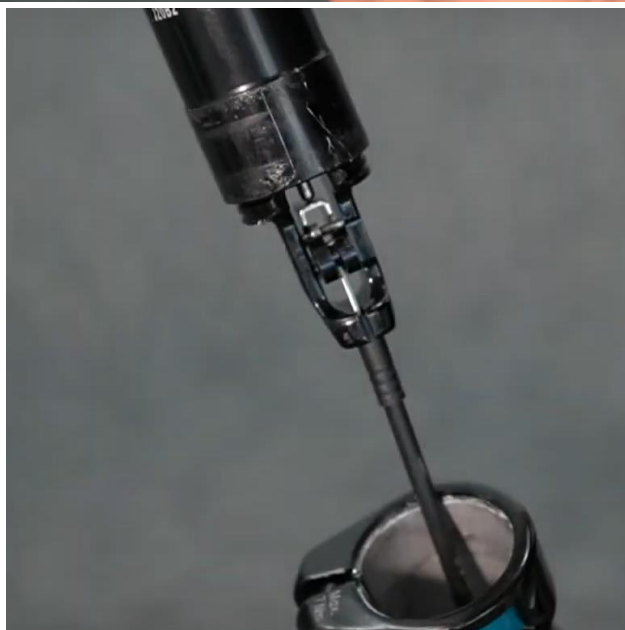

3. Once inserted, pull the cable through at the headtube



4. Make sure you insert the seat tube according to the minimum insertion



5. Check with the remote (located in the left side of the handle bar) if your seat post able to fully extended



- 6.



7. Then tighten the seat clamp to the recommended torque on the seat post clamp.

